

furniture anti-tip kit

Instructions for use




Uncompromising on safety, only high performance materials are used in the manufacture of the Fred range. This Furniture Anti-Tip Kit is engineered from top quality POM and nylon.

What's included:

- (A) 2 x Strap
- (B) 2 x Buckle Cover
- (C) 2 x Bracket Cover
- (D) 4 x Large Screw
- (E) 4 x Rawl Plug
- (F) 4 x Small Screw

Please note: The Covers are supplied attached to the Strap and not as separate pieces as shown here

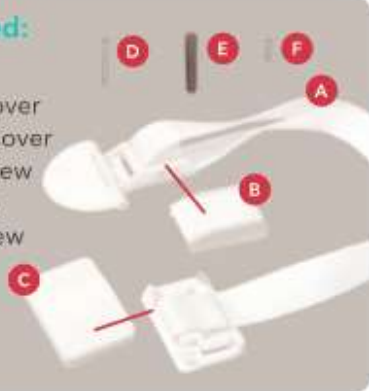


Important!

Fred wants to keep you and your family safe but we need you to do your bit, please read and follow these instructions carefully. Once your product has been installed, please keep these instructions in a safe place for future reference.

Step by step video fitting guides at www.fredsafety.co.uk

Step by step installation guide

1 You will need:

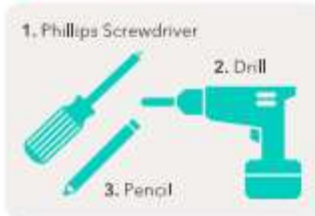

Alternatively, you can remove the hemisphere on the buckle, and use the Screws (F) or bolts (not provided) to attach it to the back of your furniture. **Do not** use the screws in end-grain or chipboard. If in doubt, please get expert help.

2



Fred SecureHold™ adhesive is instantly strong. It cannot be repositioned when placed incorrectly so test each step first, **without** exposing the adhesive. Before installation, clean and dry the surface with a 50:50 solution of water plus white vinegar or surgical spirit.

3



Lift the Buckle Cover (B) off the Strap (A).

4



Press the lever of the buckle and simultaneously pull the Strap through so the free end is just 2-3cm long.

5



Remove the protective layer to expose the adhesive strip under the hemisphere of the buckle.

6



Hold the hinged edge of the hemisphere diagonally against the top back corner of your furniture, 3-4cm from one side.

7



Drop the hemisphere down onto the top surface of your furniture, and push into place for 30 seconds. Repeat for the other side.

8



Pull the furniture 20-30cm out from the wall and lift the Bracket Cover (C) off the Strap.

9



Ensuring that the Strap remains straight and untwisted, hold the bracket to the wall about 50cm below the top of your furniture.

10



Use your pencil to mark the position of the two central screw holes, and repeat on the other side.

11



1. When attaching to wood: Use the Screws (D) and simply drill pilot holes.

2. When attaching to concrete/brick:

Use the Screws (D) and Rawl Plugs (E). Drill holes and insert rawl plugs flush with the wall.

3. When attaching to other wall materials:

Use an appropriate fixing system, getting expert help if you are in any doubt.

12



Line the bracket up with the drilled holes and screw firmly into place. Replace the Bracket Cover and repeat on the other side.

13



Push the furniture back against the wall, leaving a 1-2cm gap at the back. Press the lever of the buckle and simultaneously pull the Strap taught.

14



Tuck the Strap back down over the buckle and click the Cover back into place over the top. Repeat steps 13-14 for the other side.

1 For cleaning behind



Prise the Cover off each of the buckles, press the lever and loosen the Strap by feeding the free end back through. Repeat for the other side.

2



Pull the furniture away from the wall, keeping the Strap slightly loose at all times. Reverse this procedure to reinstall after cleaning.

To permanently remove



Use a blunt knife to carefully prise away the hemispheres from the top of your furniture and rub away any residual adhesive with your fingers. Pull the furniture away from the wall, remove the Bracket Covers and unscrew the brackets from the wall.

Safety Warnings

- **WARNING!** Adult assembly required.
- **ATTENTION!** This product acts as a deterrent but cannot replace adult supervision. Never leave children unattended. This is not a toy, do not allow children to play with it.
- Check the product regularly to ensure it is safe to use and working correctly. If worn or damaged, remove immediately and replace as needed.
- This product is designed to offer protection for children up to the age of approximately 24 months.
- If your child has learnt how to remove the product, stop using it immediately.

Other Important Information

- **Care instructions:** Wipe with a damp cloth. Do not immerse this product in water.
- **Caution!** Fred SecureHold™ adhesive may cause damage to some surfaces. We accept no liability or responsibility for damage or defects arising from the use of the adhesive on any furniture or surfaces.
- Occasionally, you will need to use a 50:50 mix of water plus either white vinegar or surgical spirit to remove adhesive residue. This mix could cause damage to some surfaces, so please test its use on a discreet area first. We do not accept any liability for damage so caused.
- Claims against warranties or guarantees must be arranged through your retailer, seller or trader. Proof of original purchase is required.

Carefully designed, top quality products for protecting against falls, finger-traps, electric shocks, burns and access to dangerous objects are what Fred is all about.

We can help you more at www.fredsafety.co.uk