

adhesive lower drawer catch


Instructions for use



Uncompromising on safety, only high performance materials are used in the manufacture of the Fred range. This Lower Drawer Catch is engineered from top quality POM.

What's included:

- (A) 1 x Fred EZ-Tool™
- (B) 2 x Mounting Plate
- (C) 2 x Catch
- (D) 2 x Hook

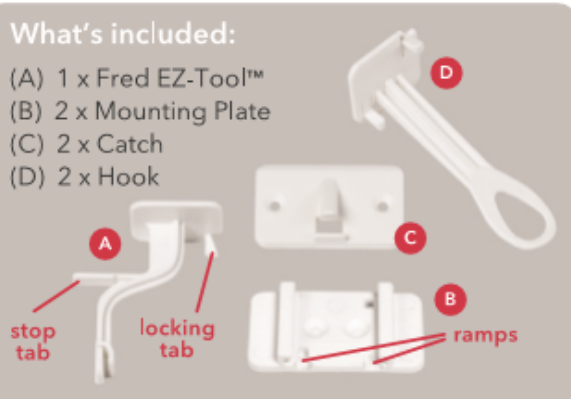

Important!

Fred wants to keep you and your family safe but we need you to do your bit, please read and follow these instructions carefully. Once your product has been installed, please keep these instructions in a safe place for future reference.

Step by step video fitting guides at www.fredsafety.co.uk

Recommended Usage

Use to the side of drawers where there is at least 60mm between the top of the side panel and the drawer above. Use on top drawers and cupboards requires that there is no overhanging worktop, and the inside of the cabinet above the drawer is flat. If using a drawer insert to tidy cutlery etc. you will need a minimum of 60mm between the top of the insert and the top of the drawer. Use on the opening edge of cupboard doors.

Step by step installation guide

1



Fred SecureHold™ adhesive is instantly strong. It cannot be repositioned when placed incorrectly so test each step first, **without** exposing the adhesive. Before installation, clean and dry the surface with a 50:50 solution of water plus white vinegar or surgical spirit.

2



Leading with the locking tab, slide the EZ-Tool™ (A) over the ramps of the Mounting Plate (B) until the two pieces lock together.



3



Remove the protective layer to expose the adhesive strip on the Catch (C).

4



Slide the broad plate of the EZ-Tool™ onto the recess on the adhesive side of the Catch.

5



Keeping all of the pieces together, hold the stop tab of the EZ-Tool™ diagonally against the side (lower drawers) or top of the cabinet (cupboards or top drawers).

6



Roll the entire assembly over until the Catch adheres to the cabinet, keeping the stop tab in contact with the cabinet. Push the Catch firmly onto the cabinet and hold for 30 seconds.

7



Swivel the EZ-Tool™ slightly until the Mounting Plate is parallel to the drawer/cupboard door as they come in to contact. Remove the protective layer to expose the adhesive strip on the Mounting Plate.

8



Gently close the drawer until it comes into contact with the Mounting Plate, then use your fingers to hold it firmly in place for 30 seconds.

9



With your fingers still holding the Mounting Plate, open the drawer, then press the fixing tab on the EZ-Tool™ so it can slide out.

10



With the arm of the Hook (D) angled toward the Catch, slide the Hook over the ramps onto the Mounting Plate until the 2 fixing tabs click into place. Leave for 24 hours before first use.

To open and close



Open the drawer until it stops. Use your fingers to push the Hook away from the Catch and open the drawer. Closing slowly, the Catch will automatically re-engage as you shut the drawer. It will not completely close until you again push the Hook away from the Catch.

To temporarily remove



Push the 2 fixing tabs together and simultaneously slide the Hook off the Mounting Plate. To reassemble, repeat step 10 above.

To permanently remove



Use a blunt knife to carefully prise away the Catch and the Mounting Plate from the surface, and rub away any residual adhesive with your fingers.

Safety Warnings

- **WARNING!** Adult assembly required.
- **ATTENTION!** This product acts as a deterrent but cannot replace adult supervision. Never leave children unattended. This is not a toy, do not allow children to play with it.
- Check the product regularly to ensure it is safe to use and working correctly. If worn or damaged, remove immediately and replace as needed.
- This product is designed to offer protection for children up to the age of approximately 24 months.
- If your child has learnt how to remove the product, stop using it immediately.
- Not suitable for drawers or cabinets next to, above or below high heat-generating appliances (e.g. hobs).

Other Important Information

- **Care instructions:** Wipe with a damp cloth. Do not immerse this product in water.
- **Caution!** Fred SecureHold™ adhesive may cause damage to some surfaces. We accept no liability or responsibility for damage or defects arising from the use of the adhesive on any furniture or surfaces.
- Occasionally, you will need to use a 50:50 mix of water plus either white vinegar or surgical spirit to remove adhesive residue. This mix could cause damage to some surfaces, so please test its use on a discreet area first. We do not accept any liability for damage so caused.
- Claims against warranties or guarantees must be arranged through your retailer, seller or trader. Proof of original purchase is required.

Making homes safer with Fred...



Top Drawer Catch



Corner Protector



Invisible Cupboard Lock

Carefully designed, top quality products for protecting against falls, finger-traps, electric shocks, burns and access to dangerous objects are what Fred is all about.

We can help you more at www.fredsafety.co.uk