

plug socket cover

Instructions for use

Fred[®]
safety just got smarter

Uncompromising on safety, only high performance materials are used in the manufacture of the Fred range. This Plug Socket Cover is engineered from top quality flame retardant high density PP.

What's included:

(A) 6 x Socket Covers



Important!

Fred wants to keep you and your family safe but we need you to do your bit, please read and follow these instructions carefully. Once your product has been installed, please keep these instructions in a safe place for future reference.

Step by step video fitting guides at www.fredsafety.co.uk

Step by step installation guide

Before inserting the Socket Cover make sure that the socket has been switched off, plugs have been removed and that there is nothing else already inserted into the socket.

1



Line up the pins of the Socket Cover with the holes in the unused socket.

2



Firmly push the Socket Cover into the electrical outlet until it is touching the front of the socket.

3



Push the arm down until you hear a 'click'.

How to remove

4



Either use your fingernail to lift the arm.

5



Or push a small coin into the slot above the arm until the arm lifts up.

6



Using your fingers, pull the arm to remove the Socket Cover. Keep it in a safe place out of reach of children.

Safety Warnings

- **WARNING!** Adult assembly required.
- **ATTENTION!** This product acts as a deterrent but cannot replace adult supervision. Never leave children unattended. This is not a toy, do not allow children to play with it.
- Check the product regularly to ensure it is safe to use and working correctly. If worn or damaged, remove immediately and replace as needed.
- This product is designed to offer protection for children up to the age of approximately 24 months.
- If your child has learnt how to remove the product, stop using it immediately.
- Never leave electrical items within your children's reach.
- The socket should be switched off when not in use.

Other Important Information

- **Care instructions:** Wipe with a damp cloth. Do not immerse this product in water.
- Claims against warranties or guarantees must be arranged through your retailer, seller or trader. Proof of purchase is required.

Making homes safer with Fred...



Door Slam Stopper



Corner Protector



Invisible Cupboard Lock



Stove & Hob Guard



Multi-Purpose Block



Fridge/Freezer Latch

Carefully designed, top quality products for protecting against falls, finger-traps, electric shocks, burns and access to dangerous objects are what Fred is all about.

We can help you more at www.fredsafety.co.uk